AQIHELL-001 INSERT

Model AQIHELL-001 Miniatures Insert Kit for Arcadia Quest: Inferno™ Hell Box Complete insert kit providing storage for miniatures, cards, and tokens



General Construction Tips

- 1) Each piece should be removed from the frames with gentle pressure back and forth. You should not need a knife to cut pieces free.
- 2) Our inserts are designed to be glued together. We use Sobo craft glue, but any glue that is tacky and dries clear will work fine. Tacky glue assists with building as it holds better during construction. You can use painter's/masking tape for some joins, but glue is always best.
- 3) Keep some paper towels handy for cleanup during build.
- 4) Ensure you cleanup excess glue as you build. This is especially important in card lanes where dividers will be used or in spaces where a tray will be stored.
- 5) Check the build diagram included in the package for reference, including all parts, as well as build tips specific to this insert.
- 6) Always dry fit pieces first to ensure a good fit and to better understand how the kit goes together.
- 7) Allow your finished insert to dry overnight.
- 8) You can optionally sand and even stain your insert.
- 9) Don't hesitate to reach out to us if you have questions!

Unlike many of our inserts, this is not a licensed insert. All trademarks/marks are the property of their respective owners.

NOT A CHILDREN'S TOY

AGE 14+


Visit go7gaming.com for a large selection of storage solutions.

Follow us on Twitter: @go7gaming and

Facebook: go7gaming



Kit Plates

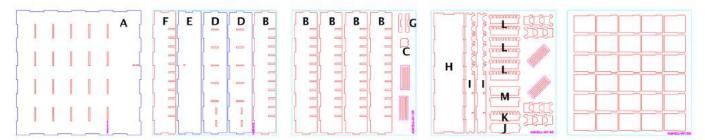


Build Instructions

Building the base insert

Please reference the diagram to the right to understand how each component goes together. Also, dry fit the insert to understand how it goes together and ensure everything is oriented properly before applying glue.

- 1) Place base (A) down on your workspace in the orientation noted to the right.
- 2) Next, apply glue to the bottom of each inner wall (B) and connect to base (A).
- 3) Next, place glue on the bottom of card stop (C) and attach to base (A).
- 4) Next, apply glue to the end tabs on one side of the inner walls (B), the bottom of the side wall (D), and then connect the side wall (D) to each side. Repeat on the other side.
- 5) Next, apply glue to the bottom and end tabs of rear wall (E) and the tab on card stop (C) and connect.
- 6) Next, place glue on the bottom and end tabs of front wall (F) and connect.
- 7) Finally, place glue on each tray support (G) and attach to each side wall (D).
- 8) You may place your dividers once the tray has had ten minutes to set/dry.

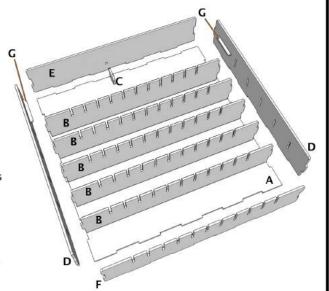

Building the token tray

- 1) Place base (H) down on your workspace in the orientation noted to the right.
- 2) Next, apply glue to the bottom of long wall (I) and connect to base (H).
- 3) Next, apply glue to the bottom and side tabs of end wall (J) and connect.
- 4) Next, apply glue to the bottom of other long wall (I) and connect.
- 5) Next, apply glue to the bottom and side tabs of divider end wall (\mathbf{K}) and connect.
- 6) Next, place a small dab of glue on the end tabs of each inner divider wall (L) and connect.
- 7) Finally, place a small dab of glue on the end tabs of each inner wall (M) and connect.
- 8) You may place your dividers once the tray has had a couple of hours to dry.

