

TEAM STORAGE SOLUTION

Model OTHTM-001 Miniatures Storage Tray for The Others: 7 Sins™ Team Boxes

This tray provides storage for minis and tiles and is stored in a Team box.



General Construction Tips

- 1) Each piece should be removed from the frames with gentle pressure back and forth. You should not need a knife to cut pieces free.
- 2) Our inserts are designed to be glued together. We use Sobo craft glue, but any glue that is tacky and dries clear will work fine. Tacky glue assists with building as it holds better during construction. You can use painter's/masking tape for some joins, but glue is always best.
- 3) Keep some paper towels handy for cleanup during build.
- 4) Ensure you cleanup excess glue as you build. This is especially important in card lanes where dividers will be used or in spaces where a tray will be stored.
- 5) Check the build diagram included in the package for reference, including all parts, as well as build tips specific to this insert.
- 6) Always dry fit pieces first to ensure a good fit and to better understand how the kit goes together.
- 7) Allow your finished insert to dry overnight.
- 8) You can optionally sand and even stain your insert.
- 9) Don't hesitate to reach out to us if you have questions!

Unlike many of our inserts, this is not a licensed insert. All trademarks/marks are the property of their respective owners.

NOT A CHILDREN'S TOY

AGE 14+





Visit go7gaming.com for a large selection of storage solutions.

Follow us on Twitter: [@go7gaming](https://twitter.com/go7gaming) and Facebook: [go7gaming](https://www.facebook.com/go7gaming)



Made in the USA

Build Instructions

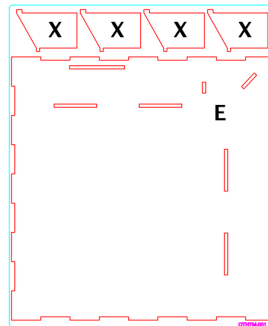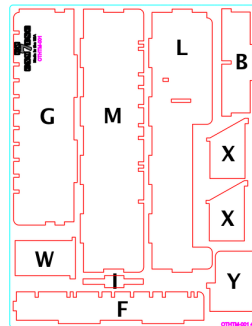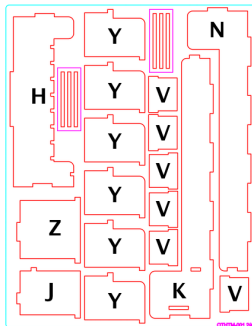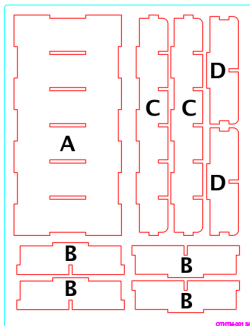


Please reference the diagrams to understand how each component fits together. Also, dry fit the pieces to understand how it goes together and ensure everything is oriented properly before applying glue. Finally, cleanup excess glue to ensure a proper fit and finish.

Building the Small Minis Tray

- 1) Place base (A) down on your workspace in the orientation noted to the right.
- 2) Next, apply glue to the bottom of the 5 inner walls (B) and connect to base (A).
- 3) Next, place glue on the right end tabs of all inner walls (B) and on the bottom of side wall (C) and connect to base (A). Repeat on the left side.
- 4) Finally, apply glue to the bottom and end tabs of end wall (D) and connect to base (A). Repeat on the other side.

- 5) Once your tray is dry and you have decided how you want to store your minis, you can apply a small dab of glue to the bottom of divider (V) and place your dividers.

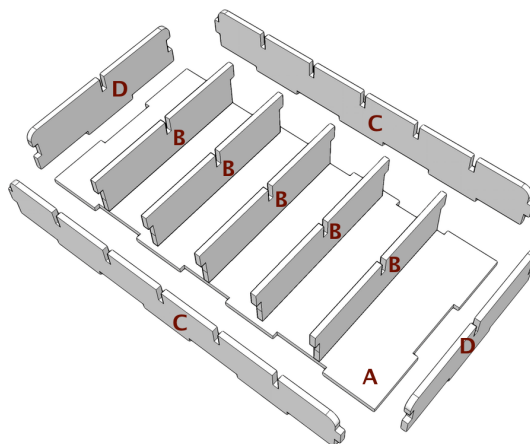

Building the Base Insert

- 1) Place base (E) down on your workspace in the orientation noted to the left.
- 2) Next, place glue on the bottom and right end tab of short inner wall (F) and connect to base (E). Don't push the bottom tabs into base (E) yet.
- 3) Next, place glue on the bottom of tall inner wall (G), connect to short inner wall (F), and seat both walls into base (E).
- 4) Next, place glue on the bottom and both side tabs of cross wall (J), and connect to the structure.
- 5) Next, place glue on the bottom of inner wall (H) and connect to base (E).
- 6) Next, place glue on both end tabs of short wall (I) and connect to outer wall (L). You will place it near the "L" in the image.

Note: ensure short wall (I) is oriented properly. In the image to the left, short wall (I) is shown connected to inner wall (H) due to the angle of the diagram, but it should be connected to outer wall (L) first.

- 7) Next, place glue on the bottom and end tabs of outer wall (L) and connect.
- 8) Next, place glue on the bottom of outer wall (K) and the end tabs of tall inner wall (G) and inner wall (H) and connect.
- 9) Next, place glue on the bottom of outer wall (M) and connect. Ensure the wall is oriented properly.
- 10) Next, place glue on the bottom and both end tabs of outer wall (N) and connect.
- 11) Finally, break a thin piece off one of your frames and use this piece to ensure there is no excess glue in the small slot between "H" and "L". Then test if your acolyte boards fit. If not, repeat.
- 12) Once your insert is dry and you have decided how you want to store your minis, you can apply a small dab of glue to the bottom of dividers (W, X, Y, Z) and place your dividers.

Congratulations! You have completed the construction of your new storage insert. If you have any questions/ concerns, don't hesitate to contact us. Finally, please take a moment to review your new solution on our website.