

GH-002 TOP TRAY

Optional top tray for our Gloomhaven™ storage solution



Construction Tips

- 1) Each piece should be removed from the frames with gentle pressure back and forth. You should not need a knife to cut pieces free.
- 2) Our inserts are designed to be glued together. We use Sobo craft glue, but any glue that is tacky and dries clear will work fine. Tacky glue assists with building as it holds better during construction. You can use painter's/masking tape for some joins, but glue is always best.
- 3) Keep some paper towels handy for cleanup during build.
- 4) Ensure you cleanup excess glue as you build. This is especially important in card lanes where dividers will be used or in spaces where a tray will be stored.
- 5) Check the build diagram included in the package for reference, including all parts, as well as build tips specific to this insert.
- 6) Always dry fit pieces first to ensure a good fit and to better understand how the kit goes together.
- 7) Allow your finished insert to dry overnight.
- 8) You can optionally sand and even stain your insert.
- 9) Don't hesitate to reach out to us if you have questions!

Visit go7gaming.com for a large selection of storage solutions. Follow us on Twitter: [@go7gaming](https://twitter.com/go7gaming) and Facebook: [go7gaming](https://facebook.com/go7gaming)






Made in the USA


NOT A CHILDREN'S TOY
AGE 14+



Build Instructions

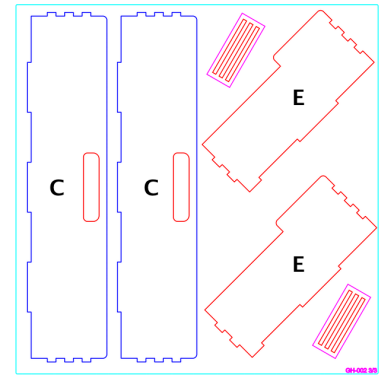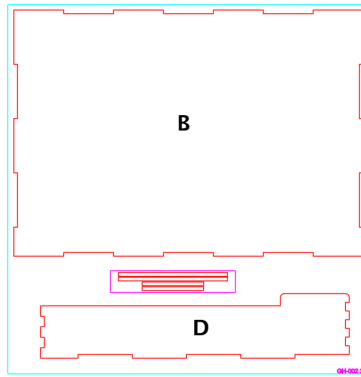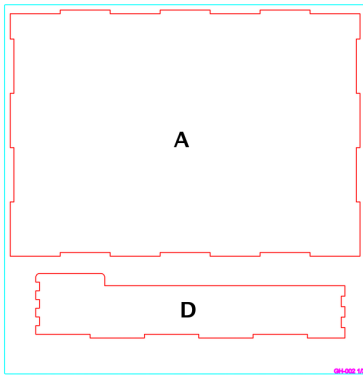

Please reference the diagrams to understand how each component fits together. Also, dry fit the pieces to understand how it goes together and ensure everything is oriented properly before applying glue. Finally, cleanup excess glue to ensure a proper fit and finish, especially in card areas.

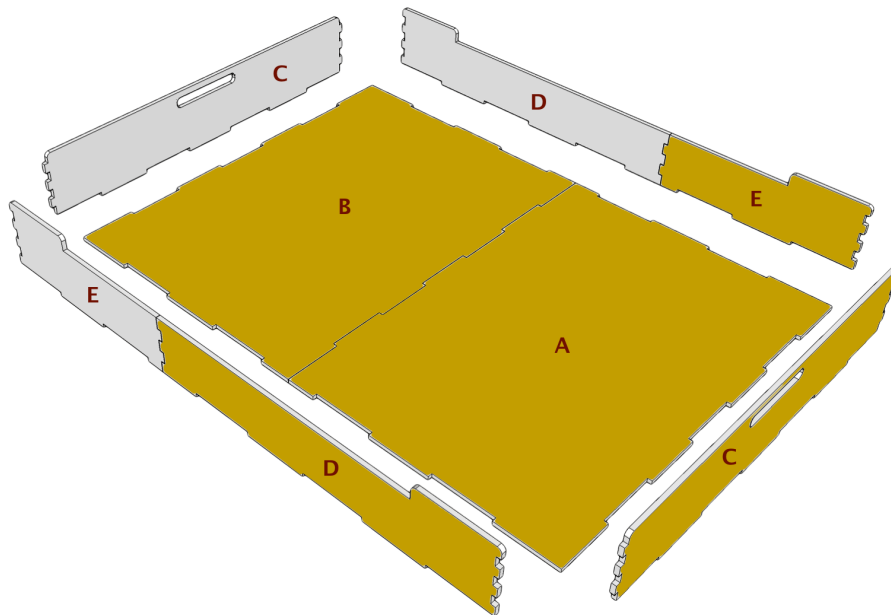

Building the Top Tray

This add-on tray is used to store map tiles, rulebooks, sticker sheets, and more.

- 1) Position base (A, B) down on your workspace in the orientation noted and glue the two pieces together along the center, clean up, and then place back down on your workspace.
- 2) Next, apply glue to the bottom of outer wall (E) and the bottom and end tabs of end wall (C) and connect to base (A, B) and each other (highlighted in brown).
- 3) Next, apply glue to the bottom of outer wall (D) on the other side and connect to base (A, B) and end wall (C) (highlighted in brown).
- 4) Next, apply glue to the bottom of outer wall (E) and connect.
- 5) Next, apply glue to the bottom and end tabs of end wall (C) and connect.
- 6) Finally, apply glue to the bottom of outer wall (D) and connect to base (A, B).
- 7) Allow your top tray to dry overnight.

- Project Complete -