

# XFIRE-002 STORAGE SOLUTION

Card Storage Solution for Dragonfire™ – Moonshae Storms

This insert kit provides storage for cards only



## Construction Tips

- 1) Each piece should be removed from the frames with gentle pressure back and forth. You should not need a knife to cut pieces free.
- 2) Our inserts are designed to be glued together. We use Sobo craft glue, but any glue that is tacky and dries clear will work fine. Tacky glue assists with building as it holds better during construction. You can use painter's/masking tape for some joins, but glue is always best.
- 3) Ensure you cleanup excess glue as you build. This is especially important in card lanes where dividers will be used or in spaces where a tray will be stored.
- 4) Check the build diagrams included in the package for reference, including all parts, as well as build tips specific to this insert.
- 5) **Always dry fit pieces first** to ensure a good fit and to better understand how the kit goes together.
- 6) Allow your finished insert to dry overnight.
- 7) You can optionally sand and even stain your insert.
- 8) Don't hesitate to reach out to us if you have questions!

Visit [go7gaming.com](http://go7gaming.com) for a large selection of storage solutions. Follow us on Twitter: [@go7gaming](https://twitter.com/go7gaming) and Facebook: [go7gaming](https://facebook.com/go7gaming)







Made in the USA  
6001 W. Parmer Ln  
Suite 370-119  
Austin, TX 78727

NOT A CHILDREN'S TOY  
**AGE 14+**



# Build Instructions

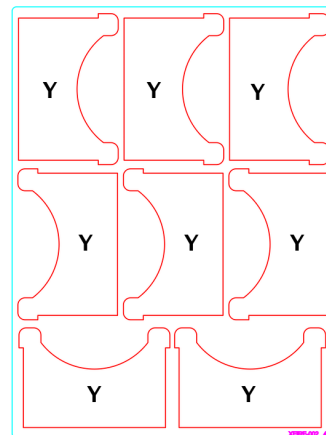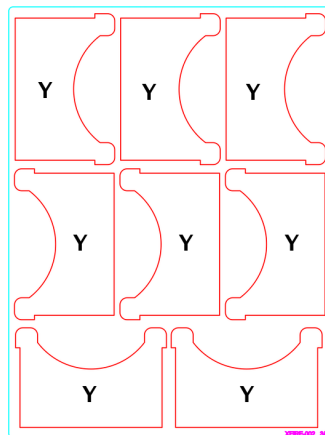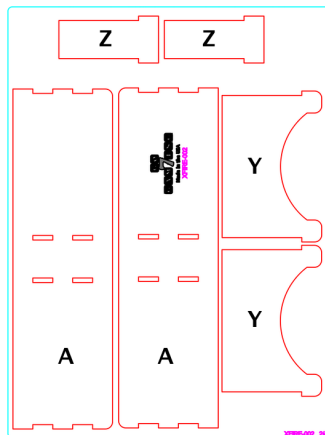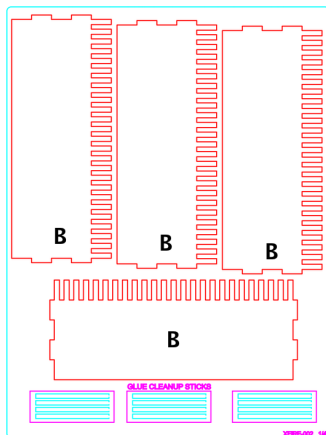


Please reference the diagrams to understand how each component fits together. Also, dry fit the pieces to understand how it goes together and ensure everything is oriented properly before applying glue. Finally, cleanup excess glue to ensure a proper fit and finish, especially in card, rail, and tray storage areas.

## Building the Card Insert

This card insert is designed to be placed inside the publisher's box and provides 352mm of card storage.

- 1) Apply glue to the left side tabs of two short walls (B) and connect to the center of long wall (A).
- 2) Next, apply glue to the right side tabs of the two short walls (B) and then connect the other long wall (A) on the other side.
- 3) Next, apply glue to the side tabs of short wall (B) and connect to the "H"-shaped structure on one side. Repeat on the other side.
- 4) Finally, place a few dividers (Y) into the insert to create perfect spacing and allow the insert to dry overnight.

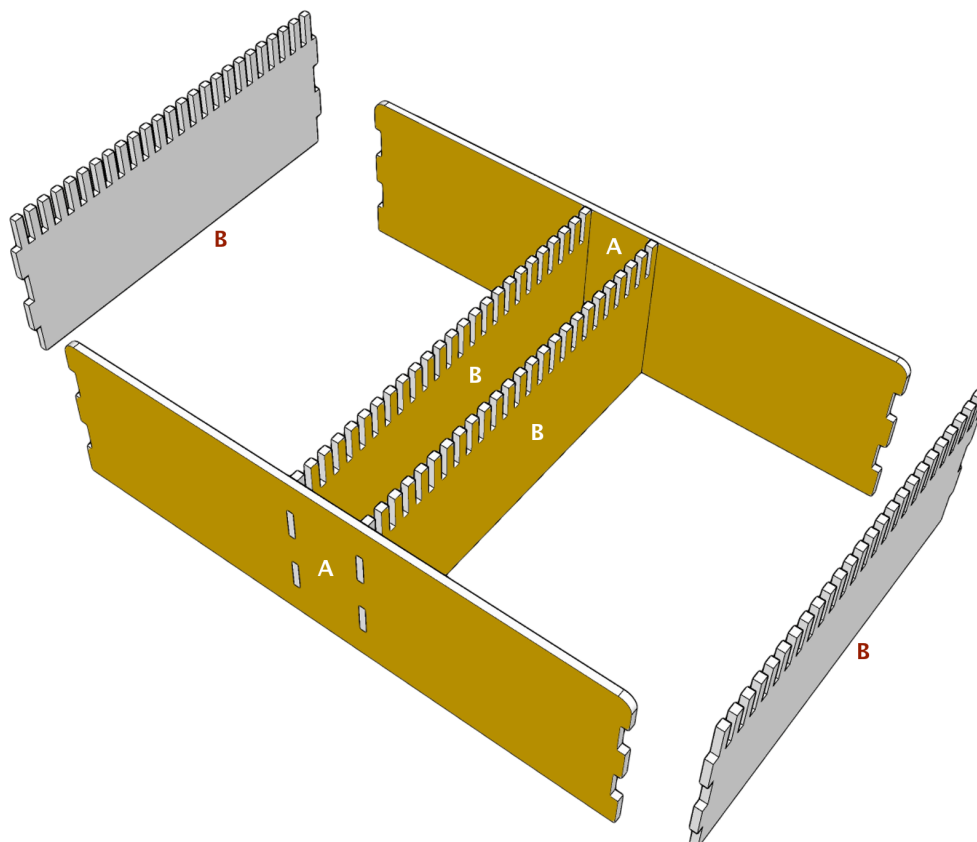

- BUILD COMPLETE -